



## Sharp Junior Metal Detector



©2018 BARSKA®

855 Towne Center Drive | Pomona, CA 91767

(t) 888.666.6769 | (f) 909.445.8169 | [www.barska.com](http://www.barska.com)

Please read before using this equipment

**FEATURES**

With your metal detector, you can hunt for coins, relics, jewelry, gold, and silver just about anywhere, including lawns, snows, mountains and etc. The detector is versatile and easy to use.

- Two operating modes:

DISC- this mode can facilitate you to search for and discriminate the target type or eliminate the metal type you don't want.

ALL METAL- it is used to search for all kinds of metal objects.

- LCD— LCD displays the metal being detected, the probable target depth, as well as the battery condition.

- ON/OFF— used to power on or power off the detector.

- Headphone Jack (3.5mm) — lets you connect stereo headphones (not supplied) and operate without trouble.

- Waterproof Search Coil — lets you use the detector even if you must put it in shallow water.


- Adjustable Shaft — lets you adjust the detector's length for comfortable use.

- Power — your metal detector requires one 9-volt alkaline battery (not supplied).

CONTENTS

Features	3
Preparation	4
Assembling the Stem	4
Adjusting The Search Coil	4
Installing the Batteries	4
Using Headphones	5
Functions & Indicators	6
Quick Look	6
Operation	6
Outdoor Testing and Using	8
Factors That Affect The Detecting	9
Care and Maintenance	10
Trouble Shooting Guide	10
Warranty	11

**PREPARATION**

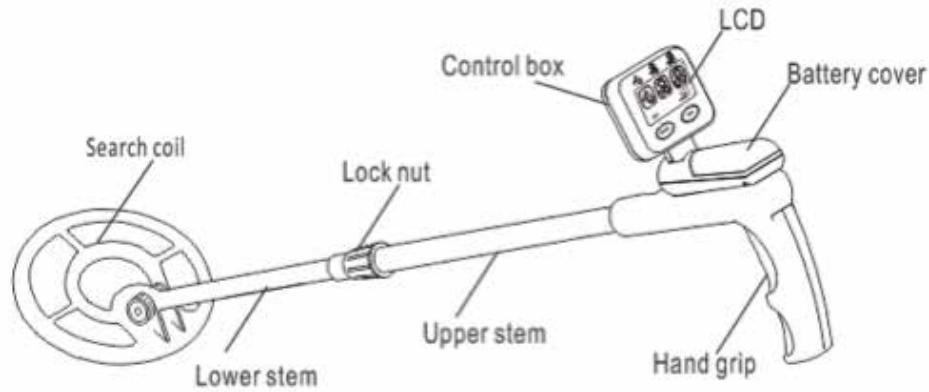

Assembling the Stem

Follow these steps to adjust the length of metal detector's stem.


1. Turn the stem's lock nut clockwise until it loosens.
2. Lengthen or shorten the stem. When you stand upright with the detector in your hand, the search coil is level with and about 1/2 to 2 inches above the ground with your arm relaxed at your side.
3. Turn the stem's lock nut counter clockwise to lock it in place.

Adjusting The Search Coil


Loosen the knobs at the search coil's end, and then adjust the search coil to the desired angle. (The search coil should be parallel with the ground.) Tighten the knobs just enough to keep the search coil from rotating or wobbling.

Installing the Batteries

1. Check the power switch on the front panel to make sure it is in the "OFF" position.
2. Slide the battery cover off in the direction of the arrow.
3. Place 9V battery into the battery compartment matching the polarity symbols (+ and -) marked inside and reinstall the battery cover.

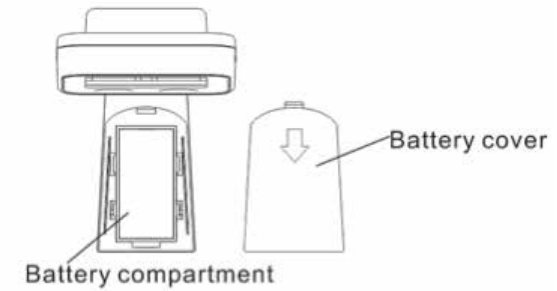


**Caution:**

 - If you don't plan to use the unit for a week or more, remove the battery. Battery can leak chemicals that may destroy electronic parts.
- Dispose old batteries promptly and properly. Never bury or burn them.
- When low battery indicator  displayed on LCD, replace the battery.


Using Headphones

Insert the stereo headphone's 3.5mm plug into the headphone jack. At this time the internal speaker is disconnected.

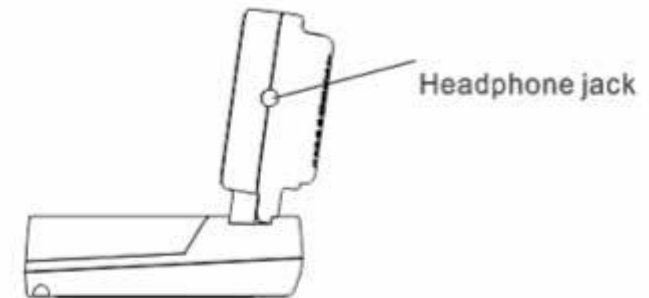

**FUNCTIONS AND INDICATORS**

 A Quick Look At The Detector

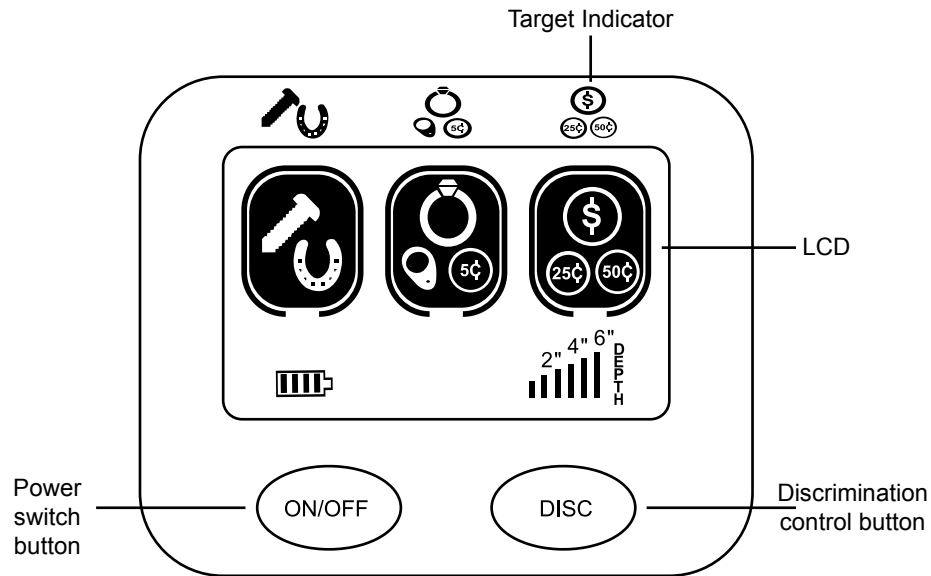


1. ON/OFF— power switch button. Press the button to power on the detector. Press it again to power off the detector.
2. DISC— used to search for and discriminate the target type or eliminate the metal target you don't want.
3. LCD— displays the metal being detected, the probable target depth, as well as the battery condition

**OPERATION**

Your metal detector has two operation modes: DISC, ALL METAL. These are motion modes. You have to move the search coil to find the target. Please follow the steps as below:

1. Press ON/OFF button to power on the detector. LCD will display all symbols. After about two seconds, LCD will display three blank frames and battery indicator. At this time, you can start operation. In this case, you can detect all kinds of metal. When the detector finds metal object, it sounds and LCD displays the target icon with black background. Target depth would also be displayed on LCD.

\*Note: The depth is reference only. Actual target depth may be varied.

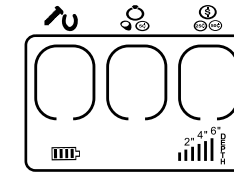

2. You can use DISC control button to eliminate the unwanted metal type. Metal types of Iron/ Nail, Bottle Cap & 5¢ / Pull Tab, 1¢ / 10¢ (zinc, copper) can be eliminated, but 25¢ / 50¢ / 1\$ is unable to be eliminated.

Setting Range			
Target Eliminated	Iron /nail, bottle cap	5¢ / pull tab (some gold ring) 1¢ / 10¢ (zinc, copper)	Iron/nail, bottle cap 5¢ / pull tab (some gold ring) 1¢ / 10¢ (zinc, copper)

3. Place the detector on a wooden or plastic table. Remove any watches, rings, or metal jewelry you are wearing.




4. Adjust the search coil so the flat part points towards the ceiling.

Note:

Never test the detector on a floor inside a building. Most buildings have metal wires in the floor, which might interfere with the objects you're testing or mask the signal completely.




5. Slowly sweep a sample of the material you want the detector to find (such as a gold ring or a coin) 2-3 inches above the face of the search coil. When the detector finds the sample, it sounds a tone and the corresponding target icon would be displayed on LCD.



For example, when nail or iron target is found,  would be displayed on LCD.

Note: If you are using a coin, the detector will detect it more easily if you hold it, so a flat side is parallel with the flat side of the search coil.

LCD Target Indications

Audio Tone	LCD Indicator	Target Indication
Low Tone		Indicates that the target is probably iron or nail. Some oxidized iron might register somewhere within the range of 25¢ / 50¢ / \$1.
Mid Tone		Indicates that the target is probably 5¢, aluminum can, pull tab, nickel or some small gold ring. 1¢ or zinc penny or a copper coin would also sort in this category.
High Tone		Indicates that the target is probably silver coin, 25¢, 50¢ or \$1. Some large aluminum coin might register within this category.

**OUTDOOR TESTING & USING**


- Find an area on the ground outside where there is no metal stuff like sprayer in the yard.
- Place a metal sample you want the detector to find (such as a gold ring or a coin) on the ground.

Note:


If you are using a valuable metal objective such as gold to test the detector, mark the area where you placed the item. It can help you find it later. Do not place it in tall grass or weeds.

Follow the steps described in OPERATION section and refer to the setting of DISC.

Sweep your search coil as following picture, move the search coil right and left in an arc line. For not missing any target, it is better to keep the distance from search coil to the ground about .5-2 inches/ 1 – 5 cm (closer to the earth for smaller target) and the distance between two neighboring arcs is about 3.94-5.91 inches/ 10 – 15cm.

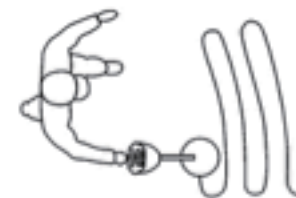

Never sweep the search coil as if it were a pendulum. Raising the search coil while sweeping or at the end of a sweep will cause false readings.

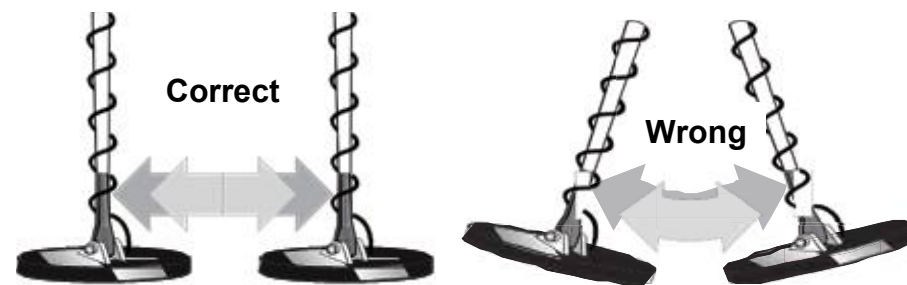

When the detector finds the sample, it sounds a tone and the corresponding target icon will be displayed on LCD.

**FACTORS THAT AFFECT THE DETECTING**

It's difficult to have an accurate detecting result. Sometimes the detecting may be restricted by some factors:

- The angle of the target buried in the soil.
- The depth of the target.
- The level of oxidization of the target.
- The size of the target.
- Electro-magnetic and electrical interference surrounding the target.

In area of highly mineralized ground or wet sand, the detector will sound even if there is no metal. In this case, you can enhance the distance between the search coil and the ground or change the searching place.

Metallic digging tools will also affect the detection if they are near the search coil. So it's better to place them a little far away.

**CARE AND MAINTENANCE**

Your metal detector is an example of superior design and craftsmanship. The following suggestions will help you care for your metal detector, so you can enjoy it for years.

- Handle the detector gently and carefully. Dropping it can damage circuit boards and cases and can cause the detector to work improperly.
- Use the detector only in normal temperature environments. Temperature extremes can shorten the life of electronic devices; damage the cases of the detector.
- Keep the detector away from dust and dirt, which can cause premature wear and tear of parts.
- Wipe the detector with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the detector.

**TROUBLESHOOTING GUIDE**

Problem	Reason	Suggestion
The detector sounds false signals.	Sweeping the detector's search coil too fast or at wrong angle.	Sweep the search coil more slowly and hold the detector correctly. For more details, please see the section of "Testing and Using"
	Using 2 detectors in close proximity	Keep two detectors at least 6 meters(20') apart
The detector does not function	Dead battery	Replace with new batteries

**1 YEAR LIMITED WARRANTY**

**Metal Detector**

WINBEST® by BARSKA®, as manufacturer, warrants this new product to be free of original defects in materials and/or workmanship for the length of time specified by this warranty. This warranty does not include damage caused by abuse, improper handling, installation, maintenance, normal wear-and-tear, unauthorized repairs or modifications and tampering in anyway.

This warranty is limited to the original purchaser and is not transferable. This warranty applies only to products purchased in the United States of America.

In the event of a defect within 30 days, the consumer must return the defective unit to the WINBEST® by BARSKA® dealer (the place of purchase) at his/her own expense.

Beyond 30 days, WINBEST® by BARSKA® products should be sent to the following address for warranty repairs. Products must be packed carefully and sturdily to prevent damage in transit, and returned freight prepaid to:

WINBEST® by BARSKA®  
855 Towne Center Drive  
Pomona, CA 91767

For additional and updated information  
please visit [www.barska.com](http://www.barska.com)

Please email [info@barska.com](mailto:info@barska.com) or call 1.888.666.6769 for Return Merchandise Number (RMA#) before any returns.

NOTE: All merchandise received without a valid RMA# will be returned to shipper at his/her own expense.

Please include all of the following when returning WINBEST® by BARSKA® products for service and/or replacement:

1. Please write your complete details (Name, Address, Telephone #, E-mail address, RMA#, etc.)
  2. Purchase receipt or Proof of Purchase. (Original/Copy)
  3. A brief explanation of the defect
  4. A Check/Money Order of \$20.00 to cover inspection, shipping and handling
- \*Please allow 6-8 weeks for delivery

This product will either be replaced or repaired at the discretion of the warrantor. If it's a discontinued item, we will replace the product with an equivalent product. Should the repair not be covered by this warranty, an estimate will be sent for your approval. Non-warranty repairs or refurbishing are always provided at a reasonable cost.

WINBEST® by BARSKA® shall not be liable for any consequential, incidental and/or contingent damages whatsoever. We will not pay shipping, insurance or transportation charges from you to us, or any import fees, duties and or taxes. This warranty supersedes all previous Winbest® by BARSKA warranties.