





# User Manual For Keypad Safe

**WARNING:** Avoid leaving door open and unattended; it will allow unauthorized individuals to reprogram the safe, gaining full access to the safe and contents.

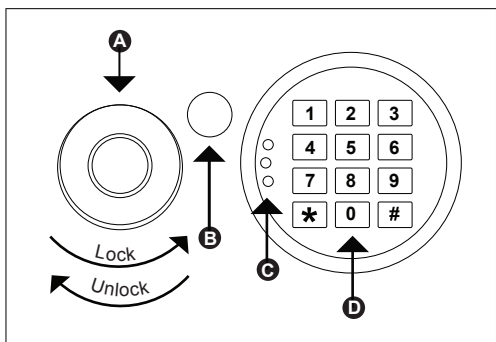

### Parts of the Control Panel

- A. Lock Knob
- B. Key Cover and Key Access
- C. Indicator Lights
- D. Keypad

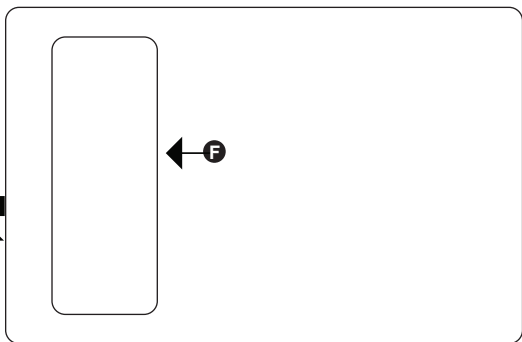

### Parts of the Inside of the Safe Door

- E. Initialization Button
- F. Battery Compartment

Actual model may vary

Note: All information, feature, and specification displayed herein are based on the data available at the time of publishing, thus they are subject to change without notice. All product pictures displayed herein are for illustration purposes only. The actual product may vary due to different circumstances.

## GETTING STARTED

1. To expose the key access, lift off the key cover.
2. Insert emergency key into key access and turn key counter-clockwise. Hold the key to open position and turn the knob clockwise to open the door.

NOTE: Store keys in a secure place. NOT inside of the safe

## INSTALL BATTERIES

1. Remove battery cover on the inside of the safe door.
2. Insert 4 new AA batteries into the battery compartment and pay attention to the polarity of the batteries.
3. Replace compartment cover.

Note: Do not use rechargeable batteries.

## PIN CODE REGISTRATION

Safe retains TWO 3-6 digit pin codes

### 1st Personal Pin Code

With safe open, press and release the initialization button located on the inside of the safe door, then enter desired pin code (3-6 digit) and “ \* ” to confirm. Yellow indicator light will turn off. Pin code registration is completed.

### 2nd Personal Pin Code

1. With safe open, press “ 00 ” and release the initialization button located on the inside of the safe door, 2 short beeps will be heard and yellow light flash.
2. On the keypad, enter desired pin code (3-6 digit) and “ \* ” to confirm. Yellow indicator light will turn off. Pin code registration is completed.

## TESTING PERSONAL PIN CODE

1. With the safe door open and the Bolts extended in the locked position, enter registered pin code and “#” to confirm.
2. Turn the knob to the unlock position and pull the safe door open.
3. Test a pin code that is not registered to ensure the Bolts will stay in the locked position.

## OPENING & CLOSING SAFE WITH PERSONAL PIN CODE

### OPEN

Enter registered personal pin code and “ # ” to confirm. Turn the knob clockwise to the unlock position and pull the safe door open.

### CLOSE

Close the safe door and turn the knob counter-clockwise to the lock position.

## CHANGING PERSONAL PIN CODE

Follow steps in “PERSONAL PIN CODE REGISTRATION”

## LOCK OUT MODE

THREE WRONG Pin code entered consecutively, the keypad will be locked for 5 minutes. During the Lockout period, the keypad will be disabled. Only Emergency key can access the safe.

## LOW BATTERY WARNING

When the door is closed and 3 repetitive beeps are heard, and Indicator Lights flash red, it indicates the batteries are low.

### NOTE:

1. After batteries are out over 24 hours, all the registered PIN codes will not be retained. Please use the key to open the safe and reset the PIN codes.
2. Safe may still be opened in low battery state depending on battery voltage.

## CARE AND MAINTENANCE

- To maximize the security and performance of the safe, keep keypad clean; use a dry cloth to remove any smudges after each use
- Keep liquids away from the control panel. Spills on the control panel will cause damage and possibly electric shock
- Secure safe in a proper area to prevent from falling and causing damage or injury
- DO NOT disassemble the product. For all repairs, contact BARSKA Customer Service
- DO NOT use chemicals or cleaning agents to clean the safe

## MOUNTING INSTRUCTIONS

The safe must be mounted to a wall or floor. Be aware of the load bearing. Failure to do so can result in personal injury and/or damage to property. Use appropriate tools when performing work and always use eye protection

### Wall Mounting

Do not mount the safe without anchoring to the wall

- Find the studs in the wall, at your desired location. Most studs are 16 inches or 24 inches apart
- Check the wall for concealed wires or pipes Measure the location of the pre-set drill holes; mark their exact position onto the wall ensuring that the studs or anything else behind will not interfere
- Drill the appropriate size holes for the anchors you are using
- Carefully press the anchor into the holes at this time
- Mount the safe by running screws from inside of the safe and securing to anchors; ensure the safe is mounted securely

### Floor Mounting

- Use proper drill tools depending on the type of floor you are mounting the safe (wood, tile, or concrete)
- Measure the location of the pre-set drill holes; mark their exact position onto the floor
- Drill the appropriate size holes for the anchors you are using
- Carefully press the anchor into the holes at this time
- Mount the safe by running screws from inside of the safe and securing to anchors; ensure the safe is mounted securely



## 1 YEAR LIMITED WARRANTY

### SAFE/LOCK BOX

BARSKA warrants this new safe/lock box to be free of defects in material and/ or workmanship under normal use for a period of twelve (12) months from the date product is purchased. This limited warranty is delimited to repair or replacement only. This warranty does not cover damage caused by improper installation or maintenance. BARSKA disclaims all liability for incidental or consequential damages resulting from misuse, abuse, accident (such as dropping), fire, flood, service or repairs other than those performed by BARSKA, acts of nature, or arising out of any breach of this warranty. Altering the product under any circumstances will automatically void the warranty.

For service under this limited warranty, please have available the proof of purchase and the purchase date and location as well as a detailed description of the problem. This warranty is not transferable and only applies to the original purchaser with a proof of purchase from BARSKA or from an authorized dealer. This warranty applies only to products purchased within the United States, excluding Alaska, the Hawaiian Islands and all U.S. territories in the Caribbean and the Pacific.

BARSKA will examine and go through troubleshooting procedures, product repair or replacement of defective part(s) or units with new part(s) or provide a new unit, if necessary, during the warranty period. Reasonable shipping/handling charges may apply and are based on Barska sole discretion. Purchaser shall be required to prepay Shipping/handling charges with a check or money order to BARSKA at time product is returned. The Return Merchandise Authorization Number (RMA#) and shipping/handling charge MUST be obtained from BARSKA in advance of return. BARSKA shall not be liable for damages or loss occurring during shipping. Please visit via [www.barska.com](http://www.barska.com) or call 909.445.8168 to obtain the RMA#, Shipping/handling amount, and for more information.

BARSKA reserves the right to modify or discontinue, without prior notice to the purchaser, any model or style of the product. BARSKA will determine, at its sole discretion, whether a product will be repaired or replaced. BARSKA reserves the right to discontinue or change any feature of its products at any time. If an exact replacement or product is not available, BARSKA reserves the right to provide a part or product that matches as closely as possible.

#### LIMITATION OF REMEDIES

BARSKA disclaims any warranties, express or implied, whether of merchantability or fitness for a particular use, except as expressly set forth herein. The sole obligation of BARSKA under this limited warranty shall be to repair or replace the covered product, in accordance with the terms set forth herein. BARSKA expressly disclaims any lost profits, general, special, indirect or consequential damages which may result from breach of any warranty, or arising out of the use or inability to use any BARSKA product. Any warranties which are implied and which cannot be disclaimed shall be limited in duration to a term of one year from the date of original retail purchase.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitation on how long an implied warranty lasts, so the above limitations and exclusions may not apply to you.

BARSKA  
855 Towne Center Drive, Pomona, CA 91767

BC767