



1 YEAR LIMITED WARRANTY

SAFE/LOCK BOX

BARSKA warrants this new safe/lock box to be free of defects in material and/ or workmanship under normal use for a period of twelve (12) months from the date product is purchased. This limited warranty is delimited to repair or replacement only. This warranty does not cover damage caused by improper installation or maintenance. BARSKA disclaims all liability for incidental or consequential damages resulting from misuse, abuse, accident (such as dropping), fire, flood, service or repairs other than those performed by BARSKA, acts of nature, or arising out of any breach of this warranty. Altering the product under any circumstances will automatically void the warranty.

For service under this limited warranty, please have available the proof of purchase and the purchase date and location as well as a detailed description of the problem. This warranty is not transferable and only applies to the original purchaser with a proof of purchase from BARSKA or from an authorized dealer. This warranty applies only to products purchased within the United States, excluding Alaska, the Hawaiian Islands and all U.S. territories in the Caribbean and the Pacific.

BARSKA will examine and go through troubleshooting procedures, product repair or replacement of defective part(s) or units with new part(s) or provide a new unit, if necessary, during the warranty period. Reasonable shipping/handling charges may apply and are based on Barska sole discretion. Purchaser shall be required to prepay Shipping/handling charges with a check or money order to BARSKA at time product is returned. The Return Merchandise Authorization Number (RMA#) and shipping/handling charge MUST be obtained from BARSKA in advance of return. BARSKA shall not be liable for damages or loss occurring during shipping. Please visit via www.barska.com or call 909.445.8168 to obtain the RMA#, Shipping/handling amount, and for more information.

BARSKA reserves the right to modify or discontinue, without prior notice to the purchaser, any model or style of the product. BARSKA will determine, at its sole discretion, whether a product will be repaired or replaced. BARSKA reserves the right to discontinue or change any feature of its products at any time. If an exact replacement or product is not available, BARSKA reserves the right to provide a part or product that matches as closely as possible.

LIMITATION OF REMEDIES

 
BARSKA disclaims any warranties, express or implied, whether of merchantability or fitness for a particular use, except as expressly set forth herein. The sole obligation of BARSKA under this limited warranty shall be to repair or replace the covered product, in accordance with the terms set forth herein. BARSKA expressly disclaims any lost profits, general, special, indirect or consequential damages which may result from breach of any warranty, or arising out of the use or inability to use any BARSKA product. Any warranties which are implied and which cannot be disclaimed shall be limited in duration to a term of one year from the date of original retail purchase.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitation on how long an implied warranty lasts, so the above limitations and exclusions may not apply to you.

BARSKA
855 Towne Center Drive, Pomona, CA 91767



User's Manual for RFID Lock Key Cabinet

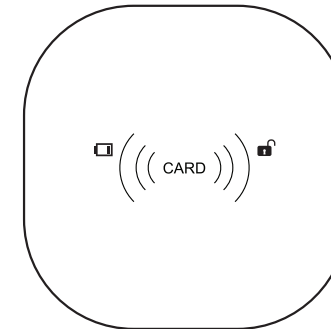

Read all instructions before using this safe.

IMPORTANT

- Test registered RFID card before closing and locking door.
- Do not Copy the RFID card, Barska is not responsible for any lost or stolen contents.
- Label each registered card after each registration.
- Do not store registered card inside of the key cabinet.
- Short beeping sound means wrong scan.
- The Lock cannot be operated when the battery voltage is low, please check and change the battery if the Low Battery Voltage indicator light is on.
- Keeping and storing management cards in a secure place is recommended, should it be lost, it cannot be replaced, the entire lock will need to be replaced.

CONTENTS		
Important		3
Part List		4
Install Battery		4
Scan Area/Knob		4
RFID Card Type And Function		5
	RFID Card Type	5
	Unlocking And Locking Key Cabinet	5
	Registering Information	6
	Register Management Card	6
	Register Main Card	6
	Register Control Card	7
Reset The Lock/Delete The Registered Card		7
Questions And Answers		7
Warranty		8

Note: All information, feature, and specification displayed herein are based on the data available at the time of publishing, thus they are subject to change without notice. All product pictures displayed herein are for illustration purposes only. The actual product may vary due to different circumstances.

Part List

1. RFID card x 5 pcs
Registered Management Card x 1
Unregistered Card x 4
2. Key Shelf: 20 pcs
3. Key Tag: 200 pcs
4. Mounting Hardware: 1 set
5. Small screwdriver: 1pc

 
Install Battery

CR2450 (not included)

Step 1: Unscrew battery box on the top of lock.


Step 2: Remove battery box and insert the battery (CR2450).

Step 3: Screw back battery box (Short flashes of Red and Green once connected).

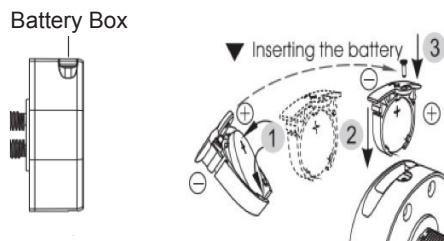

Scan Area/Knob

 - Low voltage indicator light
- Unlocking indicator light

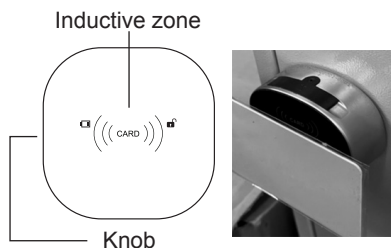

RFID Card Type And Function

A. RFID Card Type

- Management Card: 1 User
- Main Card: Up to 3 Users
- Control Card: 1 User

Note: 5 cards are included, additional cards can be purchased from BARSKA if needed.

B. Unlocking and Locking Key Cabinet

To Unlock: Use a registered RFID card to unlock Key Cabinet.

It is possible that the lock is not responding due to a low voltage in the battery, so replace it as soon as possible.

 
1. Use **Management Card**: Scan 4 times to unlock and turn knob clockwise to open the Key Cabinet.
2. Use **Main Card**: Scan 1 time to unlock and turn knob clockwise to open the Key Cabinet.
3. Use **Control Card**: Scan 1 time to unlock and turn knob clockwise to open the Key Cabinet.

To Lock:

Turn the knob counterwise to lock key Cabinet.

After locking, please always turn the knob clockwise to make sure it's fully locked

Note: The lock might not function properly if the voltage is low. Please replace the battery if the lock won't lock

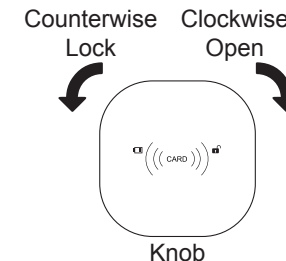

C. Registering Information

1. Register **Management Card**

Function: Add or Delete card types and unlock the key cabinet.

The key cabinet comes with a **registered Management Card**. Please use the Management Card to process other card type registration.

If you need to reset the registered Management Card, follow reset the lock procedures.

Registering **Management Card** (Only 1 User):

Step 1: First take one unregistered card.

Step 2: Next, Scan 1 time, will hear one long beep.

Step 3: To test the registered Management Card, please scan the card 4 times, the key cabinet will be unlocked.

Step 4: Label the card as a Management Card

2. Register **Main Card**

Function: To unlock the key box cabinet.

Registering **Main Card** (up to 3 users):

Step 1: First use Management Card scan 3 times and the green LED flash.

Step 2: Next, take the one unregistered card and scan it 1 time, the Main Card is now registered.

Step 3: To test the registered Main Card, please scan the card 1 time to unlock.

Step 4: Label the card as Main Card.

Note:

- To set up additional Main Card users: Repeat the Main Card registration procedure.
- After registering three users, you will not be able to add more to the card and will hear two short beeps to indicate.
- Once the main card has been registered, it cannot be deleted. Under the reset the lock registered card function (See p.8), you can only do this if necessary.

3. Register **Control Card**

Function: To unlock the key box cabinet

Registering **Control Card** (1 user):

Step 1: First use Management Card scan 1 time and the green LED flash.

Step 2: Next, take the one unregistered card to scan 1 time, the Control Card is now registered.

Step 3: To test the registered Control Card, please scan the card 1 time to unlock.

Step 4: Label the card as Control card.

Note:

- To register a new Control Card, repeat the register Control Card procedure. The previous Control Card will be invalidated.

Reset The Lock/Delete The Registered Card

(All registered cards will be deleted after this process)

Scan the Management Card 5 times until hearing two beeps and a green LED flash. ALL registered key cards are now deleted, including the Management Card.

Note:

- The card scan after this reset procedure will be a Management Card. We recommend immediately registering the management card after deletion of all types of cards.

Questions And Answers

Q: How to recognize whether a Management Card is valid?

A: Scan the card four times, the key cabinet will be unlocked.

Q: The lock does not respond when scanned.

A: Low battery voltage could be the cause, please replace battery.

Q: When you hear the two short beeps

A: This means that the card has been registered or that the maximum number of users has been reached

Q: Can be register if having multiple key cabinet with the same Management Card, Main Card or Control Card to unlock the key cabinet.

A: Yes, you can.

Q: After the door closes in five seconds, the lock does not lock

A: Low battery voltage could be the cause, please replace the battery.